


User Manual

1KW DC/DC Converter TDC-IY Series



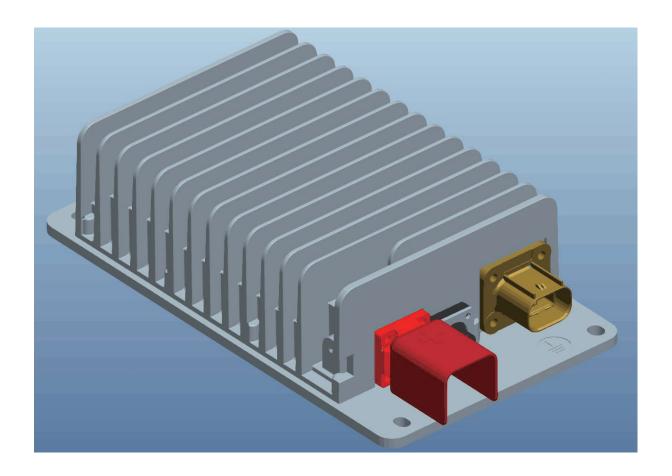


User Manual for 1000W DC/DC Converter

1. Overview

1000W DC-DC Converter, Hangzhou Tie Cheng, can install in electric vehicle, supplying 12V power to low voltage application in vehicle. Output terminal can connect directly to 12V back-up battery pack. DC-DC Converter will management the charging process of back-up battery automatically. Fully sealed potting can be highly waterproof and dust proof, highly temperature resistance, highly vibration resistance.

The diagram between DC-DC Converter,12v back-up battery pack, low voltage equipment and BMS is as below.

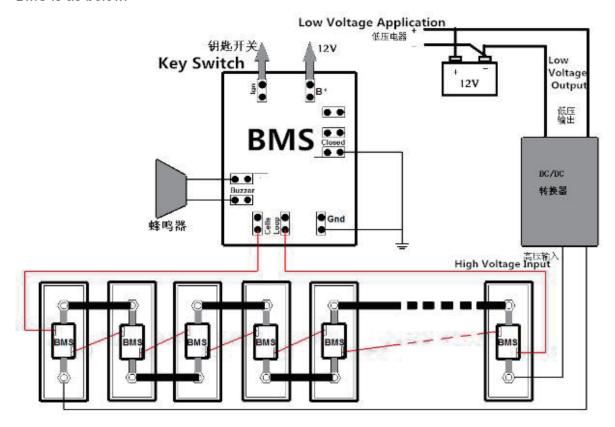

2. Basic Function


- 2.1 Converter high voltage from power battery to low voltage of 12Vdc.
- 2.2 Management charging process of 12v auxiliary battery.
- 2.3 Integrated with HVIL function. (High Voltage Internal Lock).
- 2.4 Compliant with CAN 2.0 regulation, display working status, fault code, etc.
- 2.5 Via CAN BUS, functions, OBD diagnosis, working status display, modifying working

Page 1 Total 17



parameters, encoding, etc, are achievable.


- 2.6 Protection function including reverse protection, input lower voltage and over voltage protection, output over voltage, output over current, output short circuit protection, over heating protection etc,.
- 2.7 Input terminal pre-charge function.
- 2.8 Fully sealed waterproof structure, natural air cooling.
- 3. Technical Specification
- 3.1Product name
- 3.1.1 Model Name

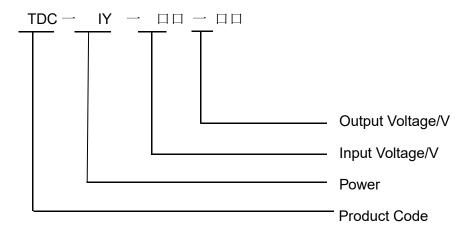

3.1.2 Model name method

Item	Description				
Power	I=1000W , IY+1000W, J=1500W , JH=1500W, K=2000W, L=2500W,				
	M=3000W				

3.1.3 Configuration

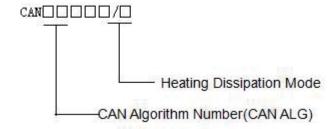

Page 2 Total 17



3.1.4 Configuration No. Name Way

Item	Description
CAN Algorithm Number(CAN	5000-9999, e.g: CAN ALG 5100: with 12V Enable.
ALG)	
Cooling	FWith Fan , Forced Air Cooling. NNatural Air Cooling ,
Cooling	WWater Cooling

3.1.5 Label Definition.

Tc 杭州铁城信息 科技有限公司

型号: TDC-IY-144-12 配置: CAN5100/N 输入: 100-200VDC 输出: 14.0V 72A

3.2 Model List

Nominal Input	Nominal Output	Model	Configuration	Heating Dissipation Mode
72V	14.0V	TDC-IY-72-12	CANxxxx/N	Natural Air Cooling
96V/108	14.0V	TDC-IY-108-12	CANxxxx/N	Natural Air Cooling
144V	14.0V	TDC-IY-144-12	CANxxxx/N	Natural Air Cooling
320V	14.0V	TDC-IY-320-12	CANxxxx/N	Natural Air Cooling



3.3 Features

	Model	TDC-IY-72-12	TDC-IY-108-12	TDC-IY-144-12	TDC-IY-320-12		
	Nominal Voltage	DC72V	DC96V/DC108V	DC144V	DC320V		
	Nominal Current	15A	10A/11A	5A	3.5A		
	Max Working Current	≤25A	≤18A	≤12A	≤8A		
ut	The range of input voltage	44-97V	72-162V	100-200V	220-450V		
Input	The protection of under voltage	42V±2V	70V±2V	96V±4V	215V±5V		
	The protection of over voltage	100±3V	162±4V	215±5V	455±5V		
	Activation Time	≈0.5S @	≈0.5S @	≈0.5S @	≈0.5S @		
		VIN=72V	VIN=108V	VIN=144V	VIN=320V		
	Nominal Voltage		14.0\	/±1%			
	Voltage Range	8.0-15V					
	Nominal Output	72A					
	Current						
	Nominal Output		100	00W			
put	DC Power						
Outpu	Peak Power		1200W Contin	nues 6 Minutes			
	Max Efficiency	≥94% ≤50ms					
	Instant						
	Responding						
	The Adjustment	1%					
	rate of voltage						

Page 4 Total 17



	Charger	
	The Adjustment	≤1%
	rate of loading	
	The steady	≤1%
	voltage	
	accuracy	
	The steady	≤2%
	current accuracy	
	The leaking	≤1mA
	current of output	
	terminal	
	The current	≤1mA
	leakage	
	The Output Ripple	≤276mV @ 12V
	12Enable Signal	6-30V
Signa	12V Enable	≤1mA
	Hi pot Test	Input to earth: 2000VAC<10ma 1 min.
	Grounding	The value of the resistor between grounding and heating sink is smaller
her	Resistance	than 100 ohm The testing current is 25A AC.
	Voltage	2000V Between Input terminal and shell, there is no
on ar	Resistance	Corona,ionization,Flying Fox,Breakdown phenomenon.
ulati	Insulation	In ambient temperature (23±2) $^{\circ}{ m C}$ and humidity 80% \sim 90%, input to
Safety Regulation and Other	Resistance	shell is not smaller than $20M\Omega$, testing voltage is $1000VDC$.
Safe	Noisy	≤50dB @ 1m away from converter
	Electromagnetic	Compliant with GB/T 18487.3-2001 11.3.1
	Immunity	

Page 5 Total 17




Electromagnetic	Compliant with GB/T 18487.3-2001 11.3.2
Abusive	
Harmonic	Compliant with GB 17625.1-2003 6.7.1.
Current	
Activation Inrush	≤3A
Current	
Current Raise	100% to 10% ≤50mS; 100% to 0% ≤200mS
Time	
Protection	IP67
Grade	
Anti-Vibration	10-25Hz, Amplitude 1.2mm, 25-500Hz 30m/s2, 8 h each direction
Reliability	MTBF 150000 H
Ambient	5%~95% NO condensation
Humidity	
Ambient Temp.	-40 ~ 65℃
Storage Temp.	-55°C ~ +85°C

3.4 Efficiency Curve

3.4.1 108V TO 12V Efficiency Curve


Input voltage 115V, nominal output voltage, the efficiency value tested result under 10 different current.

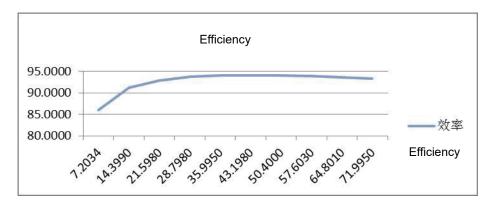

Page 6 Total 17




Nominal output power, the input voltage changing between min value and max value, the efficiency value tested under10 different voltage.

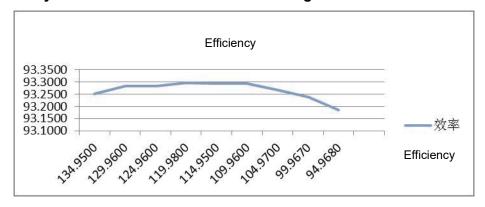


3.4.2 144V TO 12V Efficiency Curve

Input voltage 144V, nominal output voltage, the efficiency value tested result under 10 different current.

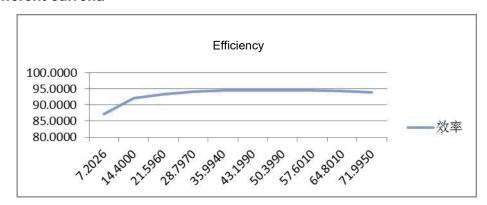


Nominal output power, the input voltage changing between min value and max value, the efficiency value tested under10 different voltage.

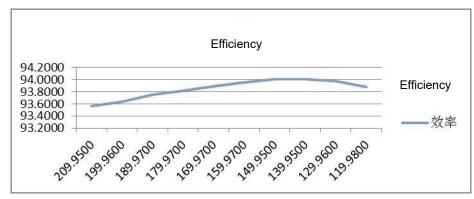

3.5 108V to 12V temperature drop curve.



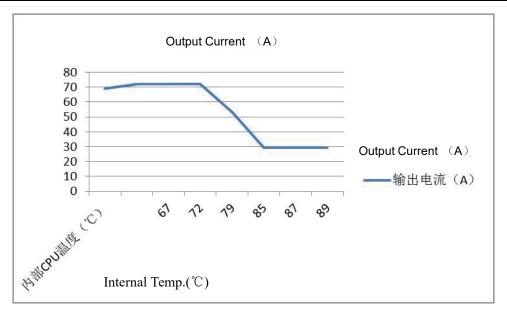

3.6 Withstand (Hi pot) Performance.

The dielectric strength between crimping to grounding and non-electric connected circuit, shall be bear the withstand testing as below table. The testing voltage is AC voltage. There should be no Corona,ionization, spark-over, ,Breakdown phenomenon.

Table 1

Items	Testing Voltage	Testing time	Current Leakage
			value
Input +&- to shell	2800V DC	1min	≤0.1mA
Output +&- to shell	2000V AC	1min	≤10mA

3.7 Isolation Performance

The dielectric strength between crimping to grounding and non-electric connected circuit, shall be bear the withstand testing as below table. The testing voltage is AC voltage. There should be no Corona,ionization, spark-over, ,Breakdown phenomenon.

Page 8 Total 17



Table 2

Items	Testing Voltage	Testing time	Testing value
Input +&- to shell	1000V DC	1min	≥20M

4.Protection Function

Shut off in 60s once Input voltage lower than protection value .
Resume automatically in 120s after the fault is removed.
Shut off once over input voltage is overt than the protection value;
Resume automatically as long as default is removed.
No damage, no working. Resume to work with normal wiring.
When the output voltage is lower than 6V, output current descend to
1/4 of nominal currentResume automatically when the short circuit
is removed , output voltage increased to above 6V.
Output power start to derating once shell temperature is over 85
deg. Shut off at 90 deg.
Shut off if the input plug is unfasten or loose.
The CAN communication invalid time is ever 50, convertor abut off
The CAN communication invalid time is over 5s, converter shut off.



5. Interface Definition


Interface	Terminal Definition	Connecto r Socket	Connector Plug	Brand	Sectional View
Input Connecto r	1-DC+; 2-DC-; 3-HVIL 4-HVIL	2103124- 4	2103177-4	Tyco	45. 4
Signal	1-Enable 2-Failure Signal 3-HVIL 4-HVIL	PP042730 3	/	ТНВ	
DC Output +	M8 Threaded hole	I	1	1	
DC Output -	outer hexagonal flange M8 pole	1	/	/	

Page 10 Total 17




6. Signal Interface schematic

6.1 CAN Communication Interface

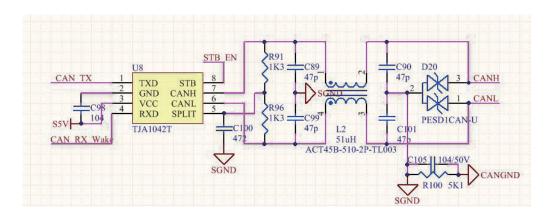


6.2 12V Enable Interface

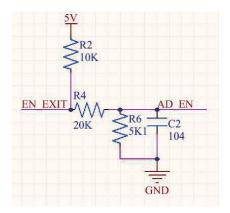

EN_EXIT is the external Enable Signal Input. AD_EN is the detection Signal of SCM.

6.3 Failure Indication/Operating Signal Interface

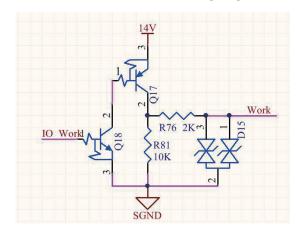


Remark: TO_WORK is the output operating signal of SCM. WORK is the DC/DC output.


Page 11 Total 17



7. Schematic Diagram.

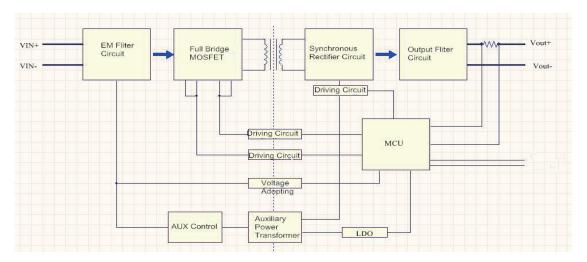

8. The Input Interface Circuit

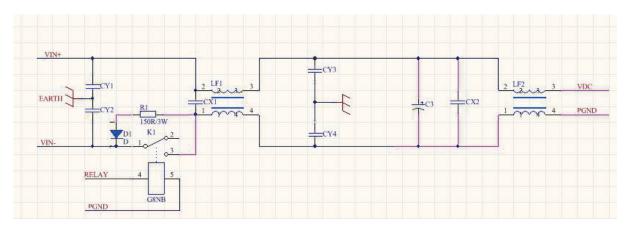


The input interface circuit is composed with pre-charge resistor, anti-reverse diode, relay, EMI Filter and filter capacitor. Refer the below table to capacity of each voltage level and inrush current. Each pre-charge resistor is 150R.

Voltage	72V	96V	144V	216V	320V
Capacity of	55UF	55UF	55UF	15UF	15UF
Capacitor	3301	3301	3301	1301	1301
Inrush	≤4A	≤4A	≤4A	≤4A	≤4A
Current					

9. The Output Interface Circuit

Page 12 Total 17



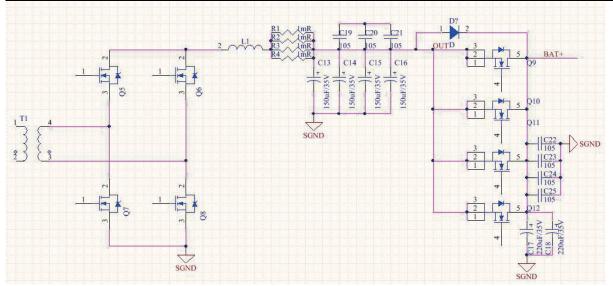


The input interface is composed with Anti-backflow circuit, filter capacitor, synchronous rectifier circuit and LC filter. The capacity of the capacitor is 440UF.


10. Power Destiny.


	Net Weight	Volume	Unitary Mass	Volume
	Net Weight	Volume	Density	Density
Unit	kg	L	kw/kg	kw/L
Value	2.5	2.2	0.4	0.45



11. The Installation Dimension.

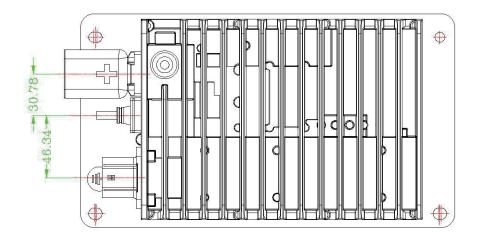

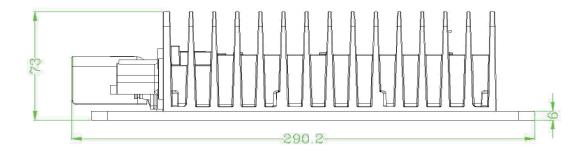

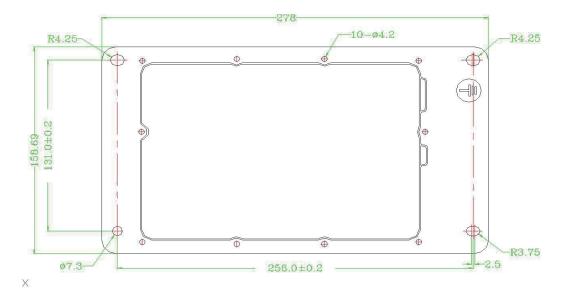


Page 14 Total 17



12. Installation Diagram.


2. Best

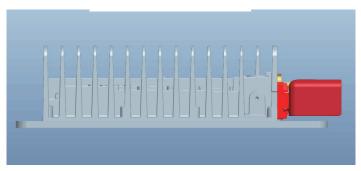


1. ok



3. Prohibited

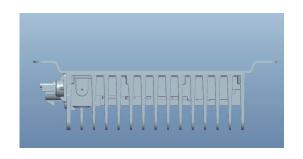

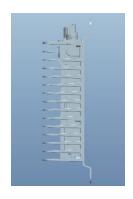


4. Prohibited

13. Application Requirements

13.1 The HV DC fuse F1 should be installed in the PDU(Power Distribution Unit) for DC-DC input terminal. The fuse's maximum current should be 1.5-2 times than the maximum input current. The fuse of 10A 960v is suggested to TDC-IY-320-12. The fuse of 20-25A 250V is suggested to TDC-IY-144-12. The fuse of 36-50A 250V is suggested to TDC-IY-72-12.

13.2 A fuse blade is required to connect in series with DC-DC output terminal, connecting with polarity of auxiliary battery pack. Then chassis is connected to the negative pole. See below diagram. The fuse blade is decided on maximum current. Normal is above 100A.



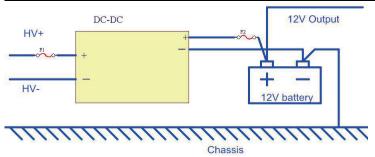

13.3 The terminals of battery pack need to be reliable, no loose. Otherwise, it may cause the damage to DC/DC converter.

14. Installation Requirements

- 1. The heating sink should be facing up. Reversion is prohibited. More than 10cm distance is required between heating sink and obstruction.
- 2. The output positive pole is M8 threaded hole, applying 14mm outer hexagonal nut. The tightening force is 14-16N.m.
- 3. The output negative pole is outer hexagonal flange M8 pole. The tightening force is 14-16N.m.